



Media Equipment Operations

Eucalyptus 2028

Skip to:

[CD Playback](#)

[Computer Projection-Classroom Computer](#)

[Computer Projector – Laptop Computer](#)

[Closed Caption Decoder-Mycap](#)

[DVD/VHS Playback](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

Computer Projection- Classroom Projection

1. Turn on Projector using Epson remote control.
2. Press **Computer 1** on the Epson remote control.
3. Turn on computer located inside table in front of the room.
4. Select **B** on A/B switch located adjacent to computer.

Computer Projector – Laptop Computer

1. Turn on projector using Epson remote control.
2. Press **Computer 1** on the Epson remote control.
3. Connect laptop computer to VGA cable installed inside table in front of the room.
4. Select **A** on A/B switch located adjacent to classroom computer.
5. If laptop display does not appear on projection screen, please refer to the [Laptop Troubleshooting Guide](#) for instructions.

DVD/VHS Playback

1. Turn on projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player, load disc or tape and play.
4. Turn on amplifier and select **Video 1**. Speaker 1 and speaker 2 must be on.

CD Playback

1. Turn on DVD player, load CD and play.
2. Turn on amplifier and select **Video 1**. Speaker 1 and speaker 2 must be on.

Closed Caption Decoder-Mycap

1. Turn on power to Mycap Decoder.
2. Press the **Caption/Text** button and select **Caption**.
3. Press the **L1/L2** button and select **L1**.

For more information, contact Kevin Glasson via email at Kevin.glasson@csun.edu. To report equipment problems, call Classroom Technology at campus extension 3062.