



## Media Equipment Operations

JR 119

Skip to:

[CD Playback](#)

[Computer Projection – Laptop Computer](#)

[Closed Caption Decoder](#)

[DVD/VHS Playback](#)

[University Video Network \(UVN\)](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

### Computer Projection – Laptop Computer

1. Turn on projector using Epson remote control.
2. Press **Computer 1** on Epson remote control.
3. Connect laptop computer to VGA input on front wall.
4. If laptop display does not appear on projection screen, please refer to the [Laptop Troubleshooting Guide](#) for instructions.

To playback audio files:

1. Connect computer to PC audio input on front wall.
2. Turn on amplifier and select **Video 2**. Speaker 1 and Speaker 2 must be on.

### DVD/VHS Playback

1. Turn on projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player, load disc or tape and play.
4. Turn on amplifier and select **Video 1**. Speaker 1 and speaker 2 must be on.

### CD Playback

1. Turn on DVD player, load CD and play.
2. Turn on amplifier and select **Video 1**. Speaker 1 and speaker 2 must be on.

### University Video Network (UVN)

1. Turn on projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player and tune to assigned channel.
4. Turn on amplifier and select **Video 1** input. Speaker 1 and speaker 2 must be on.
5. Use telephone and remote control instructions to control playback.

### **Closed Caption Decoder**

CC decoder is part of the projector and is activated via on-screen menu.

1. Press **Menu** on the Epson remote control to bring up on-screen menu.
2. Select **Extended** and press enter.
3. Select **Display** and press enter.
4. Select **Closed Caption** and press enter.
5. To enable closed captioning, select **CC1** and press enter.
6. To disable closed captioning, select **Off** and press enter.
7. Press **Menu** to clear screen menu.

For more information, contact Kevin Glasson via email at [Kevin.glasson@csun.edu](mailto:Kevin.glasson@csun.edu). To report equipment problems, call Classroom Technology at campus extension 3062.

12/23/08