



Media Equipment Operations

JR 202

Skip to:

[CD Playback](#)

[Computer Projection – Laptop Computer](#)

[Closed Caption Decoder](#)

[DVD/VHS Playback](#)

[University Video Network \(UVN\)](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

Computer Projection – Laptop Computer

1. Turn on projector using Epson remote control.
2. Press **Computer 1** button on Epson remote control.
3. Connect laptop computer to VGA input on front wall.
4. If laptop display does not appear on projection screen, please refer to the [Laptop Troubleshooting Guide](#) for instructions.

To playback audio files:

1. Connect computer to PC audio input on black box.
2. Turn on amplifier and select **Video 2**. Speaker 1 and Speaker 2 must be on.

DVD/VHS Playback

1. Turn on projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player, load disc or tape and play.
4. Turn on amplifier and select **Video 1**. Speaker 1 and speaker 2 must be on.

CD Playback

1. Turn on DVD player, load CD and play.
2. Turn on amplifier and select **Video 1**. Speaker 1 and speaker 2 must be on.

University Video Network (UVN)

1. Turn on projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player and tune to assigned channel.
4. Turn on amplifier and select **Video 1** input. Speaker 1 and speaker 2 must be on.

Closed Caption Decoder

VGIS decoder must be activated with VGIS remote control.

1. Press **Menu** on the VGIS remote control. On the Menu page, select [4].
2. To turn captions **ON**, select [2].
3. To turn captions **OFF**, select [1].
4. Press **Menu** on the VGIS remote control to exit.

For more information, contact Kevin Glasson via email at Kevin.glasson@csun.edu. To report equipment problems, call Classroom Technology at campus extension 3062.

12/13/08