



Media Equipment Operations

Live Oak 1124

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

Computer Projection – Laptop Computer

1. Turn on projector(s) using the Epson remote control.
2. Press **Computer 1** button on the Epson remote control.
3. Connect laptop computer to VGA input on the back of the A/B switch box on front desk.
4. Select **A** on the A/B switch box to send laptop image to projector on the **West** side of the room.
5. Select **B** on the A/B switch box to send laptop image to projector on the **East** side of the room.
6. If laptop display does not appear on projection screen, please refer to the [Laptop Troubleshooting Guide](#) for instructions.

For more information, contact Kevin Glasson via email at Kevin.glasson@csun.edu. To report equipment problems, call Classroom Technology at campus extension 3062.

12/12/08