



## Media Equipment Operations

Manzanita 111

Skip to:

[CD Playback](#)

[Closed Caption Decoder-MyCap](#)

[Computer Projection](#)

[DVD/VHS Playback](#)

[University Video Network \(UVN\)](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

### Computer Projection

1. Turn on Projector using Epson remote control.
2. Connect laptop computer to VGA input on wall plate.
3. Press **Source Search** on the Epson remote control.
4. If laptop display does not appear on projection screen, please refer to the [Laptop Troubleshooting Guide](#) for instructions.

To play back audio files:

1. Connect computer to PC audio input on wall plate.
2. Turn on amplifier and select **Aux**.

### DVD/VHS Playback

1. Turn on Projector using Epson remote control.
2. Turn on DVD/VHS player, load disc and play.
3. Turn on amplifier and select **DVD**.
4. Press **Source Search** on the Epson remote control.

### CD Playback

1. Turn on DVD player, load CD and play.
2. Turn on amplifier and select **DVD**.

### University Video Network (UVN)

1. Turn on Projector using Epson remote control.
2. Turn on DVD/VHS player and tune to assigned channel.
3. Turn on amplifier and select **DVD**.
4. Press **Source Search** on the Epson remote control.
5. Use telephone and remote control instructions to play back.

### **Closed Caption Decoder-Mycap**

1. Turn on My-Cap decoder.
2. Press the **Caption/Text** button and select **Caption**.
3. Press the **L1/L2** button and select **L1**.

For more information, contact Kevin Glasson via email at [kevin.glasson@csun.edu](mailto:kevin.glasson@csun.edu). To report equipment problems, call Classroom Technology at campus extension 3062.

12/20/08