



Media Equipment Operations

Manzanita 124

Skip to:

[CD Playback](#)

[Closed Caption Decoder-MyCap](#)

[Computer Projection](#)

[DVD/VHS Playback](#)

[University Video Network \(UVN\)](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

Computer Projection

1. Turn on Projector using Epson remote control.
2. Connect laptop computer to VGA input on wall plate.
3. Press **Source Search** on the Epson remote control.
4. If laptop display does not appear on projection screen, please refer to the [Laptop Troubleshooting Guide](#) for instructions.

To play back audio files:

1. Connect computer to PC audio input on wall plate.
2. Turn on amplifier and select **Aux**.

DVD/VHS Playback

1. Turn on Projector using Epson remote control.
2. Turn on DVD/VHS player, load disc and play.
3. Turn on amplifier and select **DVD**.
4. Press **Source Search** on the Epson remote control.

CD Playback

1. Turn on DVD player, load CD and play.
2. Turn on amplifier and select **DVD**.

University Video Network (UVN)

1. Turn on Projector using Epson remote control.
2. Turn on DVD/VHS player and tune to assigned channel.
3. Turn on amplifier and select **DVD**.
4. Press **Source Search** on the Epson remote control.
5. Use telephone and remote control instructions to play back.

Closed Caption Decoder-Mycap

1. Turn on My-Cap decoder.
2. Press the **Caption/Text** button and select **Caption**.
3. Press the **L1/L2** button and select **L1**.

For more information, contact Kevin Glasson via email at kevin.glasson@csun.edu. To report equipment problems, call Classroom Technology at campus extension 3062.

12/20/08