



## Media Equipment Operations

Manzanita 130

Skip to:

[CD Playback](#)

[Closed Caption Decoder](#)

[Computer Projection](#)

[Document Camera](#)

[DVD Playback](#)

[University Video Network \(UVN\)](#)

[VHS Playback](#)

[Wireless Microphone](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

### Computer Projection

1. Turn on Projector using Epson remote control.
2. Press **Computer 1** on the Epson remote control.
3. Connect laptop computer to VGA input on front wall.
4. If laptop display does not appear on projection screen, please refer to the [Laptop Troubleshooting Guide](#) for instructions.

To play back audio files:

1. Connect computer to PC audio input on front wall.
2. Turn on amplifier and select **Aux**. Adjust volume on amplifier and by using laptop volume control.

### DVD Playback

1. Turn on Projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD player, load disc and play.
4. Turn on amplifier and select **DVD**.

### CD Playback

1. Turn on DVD player, load CD and play.
2. Turn on amplifier and select **DVD**.

### VHS Playback

1. Turn on Projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on the VHS player, load tape and play.
4. Turn on amplifier and select **Video**.

### University Video Network (UVN)

1. Turn on Projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on the VHS player and tune to assigned channel.
4. Turn on amplifier and select **Video**.
5. Use telephone and remote control instructions to playback.

### Closed Caption Decoder

CC decoder is part of the projector and is activated via on-screen menus.

1. Press the **Menu** button on the Epson remote control to bring up the on-screen menu.
2. Select **Extended** and press enter.
3. Select **Display** and press enter.
4. Select **Closed Caption** and press enter.
5. To enable closed captioning select **CC1** and press enter.
6. To disable closed captioning select **Off** and press enter.
7. Press **Menu** to clear menu.
8. Press the **L1/L2** button and select **L1**.

### Document Camera

1. Turn on the Projector using the Epson remote control.
2. Press **Computer 1** on the Epson remote control.
3. Turn on Elmo document camera.
4. Turn on amplifier and select **TVSAT**.
5. Use controls on Elmo to control zoom and focus functions.

### Wireless Microphone

1. The wireless microphone is stored inside the AV cabinet.
2. Turn on wireless microphone **amplifier** inside AV cabinet.
3. Turn on wireless microphone **receiver** inside AV cabinet.
4. Turn on wireless microphone with switch on body pack transmitter.
5. Adjust volume on wireless microphone amplifier inside AV cabinet.

For more information, contact Kevin Glasson via email at [Kevin.glasson@csun.edu](mailto:Kevin.glasson@csun.edu). To report equipment problems, call Classroom Technology at campus extension 3062.

8/29/08