



## Media Equipment Operations

Sagebrush 100

Skip to:

[CD Playback](#)

[Closed Caption Decoder-Mycap](#)

[Computer Projection](#)

[DVD/VHS playback](#)

[University Video Network \(UVN\)](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

### Computer Projection

1. Turn on Main Power on panel using the green button.
2. Turn on Projector on panel using red button.
3. Select **Computer** input on panel using green button. Press until **Computer 2** displays on screen.
4. Connect laptop computer to VGA input on panel.

To play back audio files:

1. Connect computer to PC audio input on panel.
2. Turn on amplifier and adjust **PC audio** volume.

### DVD/VHS playback

1. Turn on Main power on panel using green button.
2. Turn on Projector on panel using red button.
3. Select **Video** input on panel using green button.
4. Turn on DVD/VHS player, load disc or tape and play.
5. Turn on amplifier and adjust **DVD/VHS** volume.

### CD Playback

1. Turn on Main Power on panel using green button.
2. Turn on DVD/VHS player and load disc.
3. Turn on amplifier and adjust **DVD/VHS** volume.

### **University Video Network (UVN)**

1. Turn on Main Power on panel using green button.
2. Turn on Projector on panel using red button.
3. Select **Video** input on panel using green button.
4. Turn on DVD/VHS player and tune to assigned channel.
5. Turn on amplifier and adjust **DVD/VHS** volume.
6. Use telephone and remote control instructions to control playback.

### **Closed Caption Decoder-Mycap**

1. Turn on Mycap decoder.
2. Press the **Caption/Text** button and select **Caption**.
3. Press the **L1/L2** button and select **L1**.

For more information, contact Kevin Glasson via email at [Kevin.glasson@csun.edu](mailto:Kevin.glasson@csun.edu). To report equipment problems, call Classroom Technology at campus extension 3062.