



Media Equipment Operations

Sequoia 100

Skip to:

[CD Playback](#)

[Computer Projection](#)

[Closed Caption Decoder](#)

[DVD/VHS Playback](#)

[University Video Network \(UVN\)](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

Computer Projection

1. Turn on Projector using Epson remote control.
2. Press **Computer 1** on the Epson remote control.
3. Connect laptop computer to VGA input on side of black box.

To play back audio files:

1. Connect computer to PC audio input on side of black box.
2. Turn on amplifier and select **Video 2**. Speaker 1 and speaker 2 must be on.

DVD/VHS Playback

1. Turn on Projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player, load disc or tape and play.
4. Turn on amplifier and select **Video 1**. Speaker 1 and speaker 2 must be on.

CD Playback

1. Turn on DVD player, load CD and play.
2. Turn on amplifier and select **Video 1**. Speaker 1 and speaker 2 must be on.

University Video Network (UVN)

1. Turn on Projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player and tune to assigned channel.
4. Turn on amplifier and select **Video 1** input. Speaker 1 and speaker 2 must be on.
5. Use telephone and remote control instructions to play back.

Closed Caption Decoder

VGIS decoder must be activated with VGIS remote control.

Press **Menu** on the VGIS remote control. On the Menu page, select **[4]**.

1. To turn captions **ON**, select **[2]**.
2. To turn captions **OFF**, select **[1]**.
3. Press **Menu** on the VGIS remote control to exit.

For more information, contact Kevin Glasson via email at Kevin.glasson@csun.edu. To report equipment problems, call Classroom Technology at campus extension 3062.