



Media Equipment Operations

Sequoia 101

Skip to:

[CD Playback](#)

[Computer Projection](#)

[Closed Caption Decoder-Mycap](#)

[DVD/VHS Playback](#)

[University Video Network \(UVN\)](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

Computer Projection

1. Turn on projector using Epson remote control.
2. Press **Computer 1** on the Epson remote control.
3. Connect laptop computer to VGA input inside black box.
4. If laptop display does not appear on projection screen, please refer to the [Laptop Troubleshooting Guide for instructions](#).

To play back audio files:

1. Connect computer to PC audio input inside black box.
2. Turn on amplifier and adjust PC audio volume at **Input 4**.

DVD/VHS Playback

1. Turn on projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player, load disc or tape and play.
4. Turn on amplifier and adjust DVD/VHS volume at **Input 5**.

CD Playback

1. Turn on DVD/VHS player, load disk and play.
2. Turn on amplifier and adjust DVD/VHS volume at **Input 5**.

University Video Network (UVN)

1. Turn on projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVS/VSH player and tune to assigned channel.
4. Turn on amplifier and adjust DVD/VHS volume at **Input 5**.
5. Use telephone and remote control instructions to control playback.

Closed Caption Decoder-Mycap

1. Turn on Mycap decoder.
2. Press **Caption/Text** button and select **Caption**.
3. Press **L1/L2** button and select **L1**.

For more information, contact Kevin Glasson via email at kevin.glasson@csun.edu. To report equipment problems, call Classroom Technology at campus extension 3062.

4/10/09