



Media Equipment Operations

Sierra Hall 198

Skip to:

[CD Playback](#)

[Computer Projection – Laptop Computer](#)

[Closed Caption Decoder](#)

[DVD/VHS Playback](#)

[University Video Network \(UVN\)](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

Computer Projection – Laptop Computer

1. Turn on projector using the Epson remote control.
2. Press **Computer 2** on the Epson remote control.
3. Connect laptop computer to VGA cable inside black box.
4. If laptop display does not appear on projection screen, please refer to the [Laptop Troubleshooting Guide](#) for instructions.

To play back audio files:

1. Connect computer to PC audio cable inside black box.
2. Turn on amplifier and select **Computer**.

DVD/VHS Playback

1. Turn on projector using control Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player, load disc or tape and play.
4. Turn on amplifier and select **DVD/VCR**.

CD Playback

1. Turn on DVD/VHS player, load CD and play.
2. Turn on amplifier and select **DVD/VCR**.

University Video Network (UVN)

1. Turn on projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player, and tune to assigned channel.
4. Turn on amplifier and select **DVD/VCR**.
5. Use telephone and remote control instructions to control playback.

Closed Caption Decoder

VGIS decoder must be activated with VGIS remote control.

1. Press **Menu** on the VGIS remote control. On the Menu page, select **[4]**.
2. To turn captions ON, select **[2]**.
3. To turn captions OFF, select **[1]**.
4. Press Menu on the VGIS remote control to exit.

For more information, contact Kevin Glasson via email at kevin.glasson@csun.edu. To report equipment problems, call Classroom Technology at campus extension 3062.

1/28/09