



## Media Equipment Operations

Sierra Hall 384

Skip to:

[CD Playback](#)

[Computer Projection](#)

[Closed Caption Decoder](#)

[DVD/VHS Playback](#)

[University Video Network \(UVN\)](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

### Computer Projection – Laptop Computer

1. Turn on Projector using the Epson remote control.
2. Press **Computer 2** on the Epson remote control.
3. Connect laptop computer to VGA input on front wall.
4. If laptop display does not appear on the projection screen, please refer to the [Laptop Troubleshooting Guide](#) for instructions.

To play back audio files:

1. Connect computer to PC audio input on front wall.
2. Turn on amplifier and select **Video 2**. Speaker 1 and speaker 2 must be on.

### DVD/VHS Playback

1. Turn on Projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player, load disc or tape and play.
4. Turn on amplifier and select **Video 1**. Speaker 1 and speaker 2 must be on.

### CD Playback

1. Turn on DVD player, load CD and play.
2. Turn on amplifier and select **Video 1**. Speaker 1 and speaker 2 must be on.

### University Video Network (UVN)

1. Turn on projector using the Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player and tune to assigned channel.
4. Turn on amplifier and select **Video 1** input. Speaker 1 and speaker 2 must be on.
5. Use telephone and remote control instructions to control playback.

## Closed Caption Decoder-Mycap

1. Turn on Mycap decoder.
2. Press the **Caption/Text** button and select **Caption**.
4. Press the **L1/L2** button and select L1.

For more information, contact Kevin Glasson via email at [Kevin.glasson@csun.edu](mailto:Kevin.glasson@csun.edu). To report equipment problems, call Classroom Technology at campus extension 3062.

6/17/09