

# California State University Northridge

## UNIVERSITY VIDEO NETWORK (U.V.N.) OPERATIONS

JD 1555

### Equipment Preparation

1. Use EPSON remote control to turn on the data projector; select **Video** as input source.
2. Turn on Harman turner, select **VID1** as input and make sure **Speaker 1&2** are ON and **T-mon** is OFF.
3. Turn on the video player and set it to **VCR** mode by using the remote (you will see VCR light up).
4. Tune the VCR to **assigned channel** by pressing Channel up/down button.



If UVN scroll is seen, proceed to use the phone to activate the UVN system.


**Note:** If all settings are correct but there isn't a UVN signal, check to see if **VCR is set on CABLE** using VCR remote control (press the Action or Menu button).

UNIVERSITY VIDEO NETWORK (U.V.N) OPERATIONS

Using the Phone to Access the UVN System

1. Dial assigned phone extension and wait for the beep.
2. Upon hearing the beep, the phone becomes your remote control.
3. See diagrams below for number keys and their corresponding functions.
4. Leave phone off the hook during the show so you may use remote functions at any time.
5. When finished, stop the video and hang up the phone.
6. If classroom phone is faulty, use cell phone to activate the system by dialing (818) 677-EXTENSION.
7. For further UVN assistance and/or to report phone problems, call extension 2688.

**VHS Remote Control**

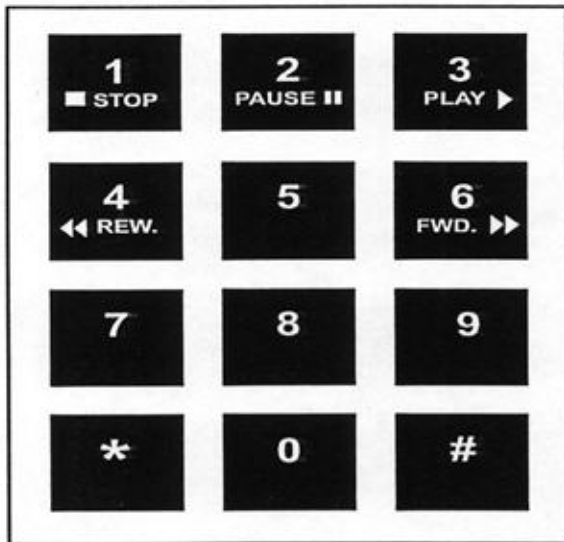

**DVD Remote Control**

