



## UNIVERSITY VIDEO NETWORK (U.V.N.) OPERATIONS

JD 3514

### Equipment Preparation

1. Use EPSON remote to turn on the data projector; Select **Video** as input source
2. Turn on Harman tuner; select **VID1** as input; make sure **Speaker 1&2** are ON and **T-mon** is OFF
3. Turn on the DVD/VCR player; set it to **VCR** mode by pushing DVD/VCR button
4. Tune the VCR to **assigned channel** by pressing Channel up /down button.
5. If UVN scroll is seen on screen, proceed to use the phone to activate the UVN system.


**Note:** If all settings are correct but no UVN signal, check to see if **VCR is set on CABLE** by pressing the Menu or Action button on the VCR remote

UNIVERSITY VIDEO NETWORK (U.V.N.) OPERATIONS

Using the Phone to Access the UVN System

1. Dial assigned phone extension and wait for the beep.
2. Upon hearing the beep, the phone pad becomes your remote control.
3. See diagrams below for number keys and their corresponding functions.
4. Leave phone off the hook during the show so you may use remote functions at any time.
5. When finished, stop the video and hang up the phone.
6. If classroom phone is faulty, use cell phone to activate the system by dialing 1-818-677-EXTENSION
7. For further UVN assistance and/or to report phone problems, call extension 2688.

**VHS Remote Control**

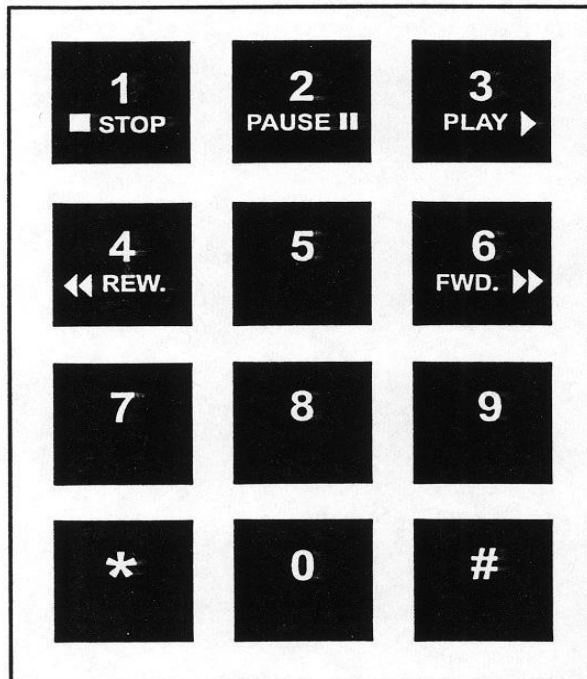

**DVD Remote Control**

