

UNIVERSITY VIDEO NETWORK (U.V.N.) OPERATIONS

JH 1125

**Equipment Preparation**

1. Use EPSON remote to turn on the data projector; select **Video** as input source.
2. Turn on the SONY amplifier, select **VID1** and **Speaker A+B** as the sound source and output.
3. Turn on the LG VCR, tune to **assigned channel** by using the remote in drawer, or by flipping open the panel on the bottom half of VCR and tune channel by pressing channel up/down buttons.




If UVN scroll appears on screen, proceed to use the phone to activate the UVN system.

UNIVERSITY VIDEO NETWORK (U.V.N.) OPERATIONS

Using the Phone to Access the UVN System

1. Dial assigned phone extension and wait for the beep.
2. Upon hearing the beep, the phone pad becomes your remote control.
3. See diagrams below for number keys and their corresponding functions.
4. Leave phone off the hook during the show so you may use remote functions at any time.
5. When finished, stop the video and hang up the phone.
6. If classroom phone is faulty, use cell phone to activate the system by dialing 1-818-677-EXTENSION
7. For further UVN assistance and/or to report phone problems, call extension 2688.

**VHS Remote Control**

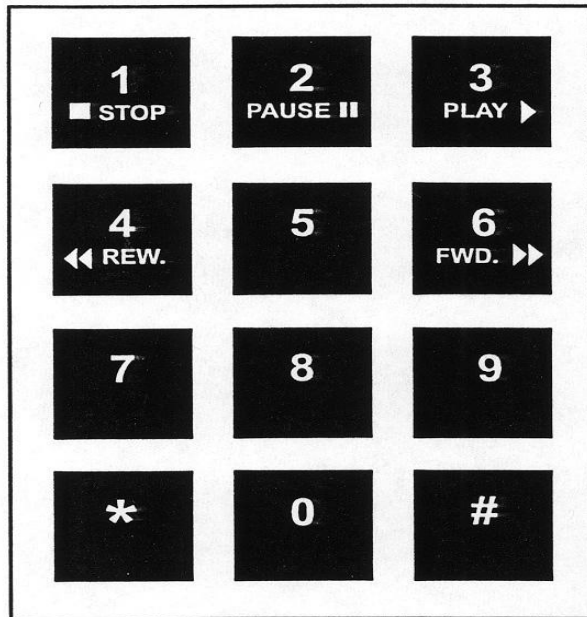

**DVD Remote Control**

