


California State University Northridge

UNIVERSITY VIDEO NETWORK (U.V.N.) OPERATIONS

JH 1230

Equipment Preparation

1. Use Epson remote to turn on Data Projector; select **Video** as input.
2. Turn on the SONY amplifier, select **VID1** and **Speaker A+B** as the sound source/output
3. Turn on Harman tuner, select **VID1** as input and make sure **Speaker 1&2** are ON and **T-mon** is OFF.
4. Turn on the LG VCR, tune VCR to **assigned channel** by using remote (in drawer), or by flipping open the panel (bottom half of VCR) and tune channel by pressing **Channel up /down buttons**.

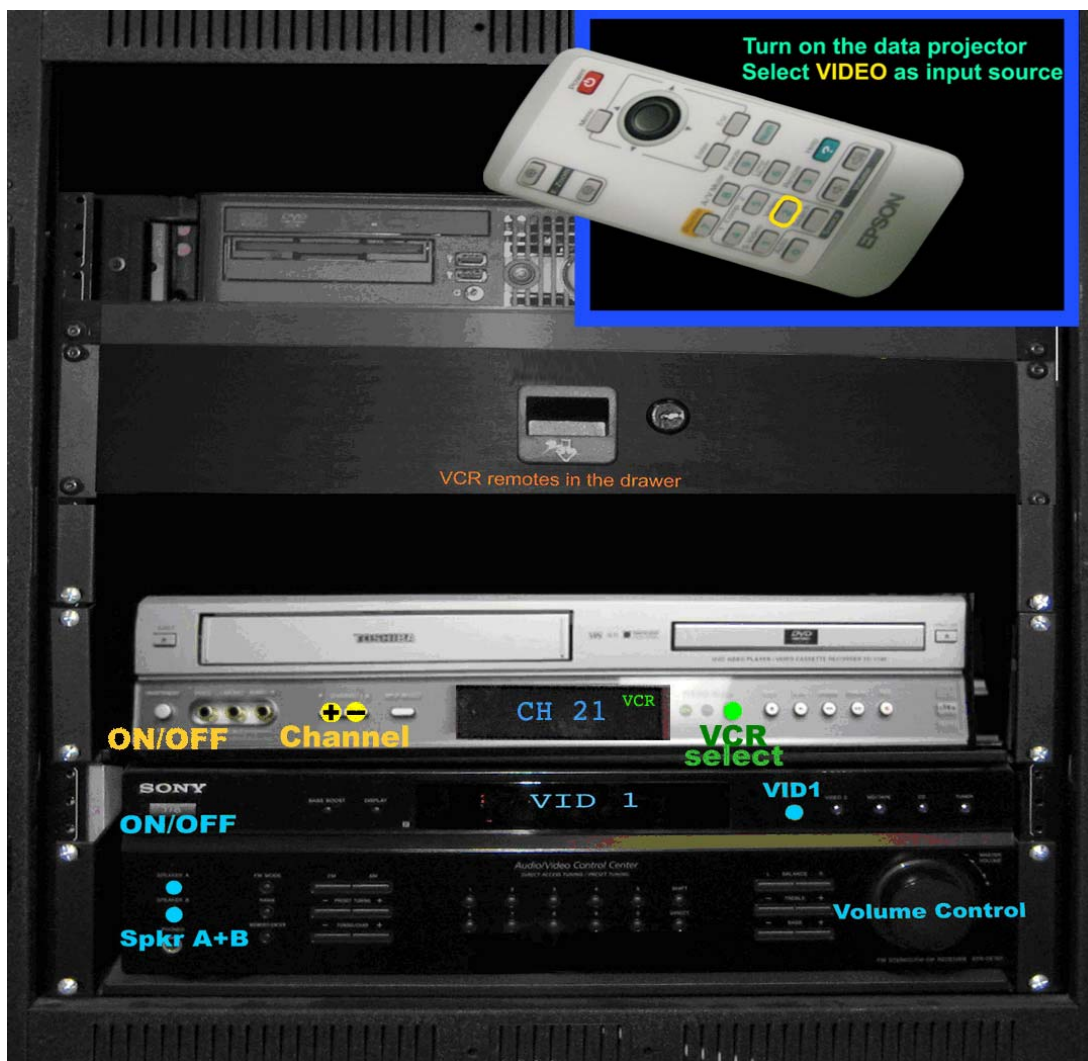

Note: If all settings are correct but there isn't a UVN signal, check to see if **VCR is set to CABLE** by pressing the Menu or Action button.

UNIVERSITY VIDEO NETWORK (U.V.N) OPERATIONS

Using the Phone to Access the UVN System

1. Dial assigned phone extension and wait for the beep.
2. Upon hearing the beep, the phone becomes your remote control.
3. See diagrams below for number keys and their corresponding functions.
4. Leave phone off the hook during the show so you may use remote functions at any time.
5. When finished, stop the video and hang up the phone.
6. If classroom phone is faulty, use cell phone to activate the system by dialing (818) 677-EXTENSION.
7. For further UVN assistance and/or to report phone problems, call extension 2688.

VHS Remote Control



DVD Remote Control

