



Media Equipment Operations

Education 1123

Skip to:

[CD Playback](#)

[Closed Caption Decoder](#)

[Computer Projection](#)

[DVD/VHS playback](#)

[University Video Network \(UVN\)](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

Computer Projection

1. Turn on projector using the Mitsubishi remote control.
2. Press **Computer 1** on the Mitsubishi remote control.
3. Connect laptop computer to VGA input on front wall.

To play back audio files:

1. Connect computer to PC audio input on front wall.
2. Turn on DVD/VHS player and press the **Input Select** button on DVD/VHS remote control and select **L1**.
3. Turn on amplifier and adjust volume on **Input 7**.

DVD/VHS playback

1. Turn on projector using the Mitsubishi remote control.
2. Press **Video 1** on the Mitsubishi remote control.
3. Turn on DVD/VHS player, load disk or tape and play.
4. Turn on amplifier and adjust volume on **Input 7**.

CD Playback

1. Turn on DVD player, load CD and play.
2. Turn on amplifier and adjust volume on **Input 7**.

University Video Network (UVN)

1. Turn on projector using the Mitsubishi remote control.
2. Press **Video 1** on the Mitsubishi remote control.
3. Turn on DVD/VHS player and tune to assigned channel.
4. Turn on amplifier and adjust volume on **Input 7**.
5. Use telephone and remote control instructions to control playback.

Closed Caption Decoder

1. Press **Menu** on the VGIS remote control. On the Menu page, select **[4]**.
2. To turn captions.
3. **ON**, select **[2]**.
4. To turn captions **OFF**, select **[1]**.
5. Press **Menu** on the VGIS remote control to exit.

For more information, contact Kevin Glasson via email at Kevin.glasson@csun.edu. To report equipment problems, call Classroom Technology at campus extension 3062.