



## Media Equipment Operations

Education 3115

Skip to:

[CD Playback](#)

[Closed Caption Decoder](#)

[Computer Projection](#)

[DVD/VHS playback](#)

[University Video Network \(UVN\)](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

### Computer Projection

1. Turn on projector using the Epson remote control.
2. Press **Computer 1** on the Epson remote control.
3. Connect laptop computer to VGA input on side of black box.

To play back audio files:

1. Connect computer to PC audio input on side of black box.
2. Turn on DVD/VHS player and press Input button on DVD/VHS remote control and select L1.
3. Turn on amplifier and adjust volume on Input 8.

### DVD/VHS playback

1. Turn on projector using the Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player, load disk or tape and play.
4. Turn on amplifier and adjust volume on **Input 8**.

### CD Playback

1. Turn on DVD player, load CD and play.
2. Turn on amplifier and adjust volume on **Input 8**.

### University Video Network (UVN)

1. Turn on projector using the Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player and tune to assigned channel.
4. Turn on amplifier and adjust volume on **Input 8**.
5. Use telephone and remote control instructions to control playback.

### **Closed Caption Decoder**

CC decoder is part of the projector and is activated via on-screen menus.

1. Press the **Menu** button on the Epson remote control to bring up the on-screen menu.
2. Select **Extended** and press enter.
3. Select **Display** and press enter.
4. Select **Closed Caption** and press enter.
5. To enable closed captioning, select **CC 1** and press enter.
6. To disable closed captioning, select **Off** and press enter.
7. Press **Menu** to clear on-screen menu.

For more information, contact Kevin Glasson via email at [Kevin.glasson@csun.edu](mailto:Kevin.glasson@csun.edu). To report equipment problems, call Classroom Technology at campus extension 3062.