



Media Equipment Operations

Jacaranda 2520

Skip to:

[CD Playback](#)

[Closed Caption Decoder](#)

[Computer Projection](#)

[DVD/VHS playback](#)

[University Video Network \(UVN\)](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

Computer Projection

1. Turn on projector using the Epson remote control.
2. Press **Computer 1** on the Epson remote control.
3. Connect laptop computer to VGA input on wall plate.

To play back audio files:

1. Connect computer to PC audio input on wall plate.
2. Turn on amplifier and select **Video 2**. Speaker 1 and Speaker 2 must be on.

DVD/VHS playback

1. Turn on projector using the Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player, load disk or tape and play.
4. Turn on amplifier and select **Video 1**. Speaker 1 and speaker 2 must be on.

CD Playback

1. Turn on DVD player, load CD and play.
2. Turn on amplifier and select **Video 1**. Speaker 1 and speaker 2 must be on.

University Video Network (UVN)

1. Turn on projector using the Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player and tune to assigned channel.
4. Turn on amplifier and select **Video 1** input. Speaker 1 and speaker 2 must be on.
5. Use telephone and remote control instructions to control playback.

Closed Caption Decoder

VGIS decoder must be activated with VGIS remote control.

1. Press the **Menu** on the VGIS remote control. On the Menu page select **[4]**.
2. To turn captions **ON**, select **[2]**.
3. To turn captions **OFF**, select **[1]**.
4. Press **Menu** on the VGIS remote control to exit.

For more information, contact Kevin Glasson via email at Kevin.glasson@csun.edu. To report equipment problems, call Classroom Technology at campus extension 3062.