



## Media Equipment Operations

Jacaranda 3510

Skip to:

[CD Playback](#)

[Closed Caption Decoder](#)

[Computer Projection](#)

[DVD/VHS playback](#)

[University Video Network \(UVN\)](#)

The following is a list of media equipment available in this classroom. Locate the media equipment you are trying to use and simply follow the steps to operate.

### Computer Projection

1. Turn on Projector using the Epson Remote control.
2. Press **Computer 1** on the Epson remote control.
3. Connect laptop computer to VGA input on wall plate.

To play back audio files:

1. Connect computer to PC audio input on wall plate.
2. Turn on amplifier and select **Video 2**. Speaker 1 and speaker 2 must be on.

### DVD/VHS playback

1. Turn on Projector using Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player, load disc or tape and play.
4. Turn on amplifier and select **Video 1**. Speaker 1 and speaker 2 must be on.

### CD Playback

1. Turn on DVD player, load CD and play.
2. Turn on amplifier and select **Video 1**. Speaker 1 and speaker 2 must be on.

### University Video Network (UVN)

1. Turn on Projector using the Epson remote control.
2. Press **Video** on the Epson remote control.
3. Turn on DVD/VHS player and tune to assigned channel.
4. Turn on amplifier and select **Video 1** input. Speaker 1 and speaker 2 must be on.
5. Use telephone and remote control instructions to control playback.

### **Closed Caption Decoder**

VGIS decoder must be activated with VGIS remote control.

1. Press **Menu** on the VGIS remote control. On the Menu page, select **[4]**.
2. To turn captions **ON**, select **[2]**.
3. To turn captions **OFF**, select **[1]**.
4. Press **Menu** on the VGIS remote control to exit.

For more information, contact Kevin Glasson via email at [Kevin.glasson@csun.edu](mailto:Kevin.glasson@csun.edu). To report equipment problems, call Classroom Technology at campus extension 3062.